

**NANLITE**

+86-754-85751187

+86-754-85300887

service@nanlite.com

Zhangjin, 324 Dongli, Chenghai, Shantou, Guangdong, China

## USER MANUAL


**FL-20/FL-20G** Focusable Fresnel Lens

[www.nanlite.com](http://www.nanlite.com)

Guangdong NanGuang Photo&Video Systems Co., Ltd

# FL-20/FL-20G Focusable Fresnel Lens

## Product Show

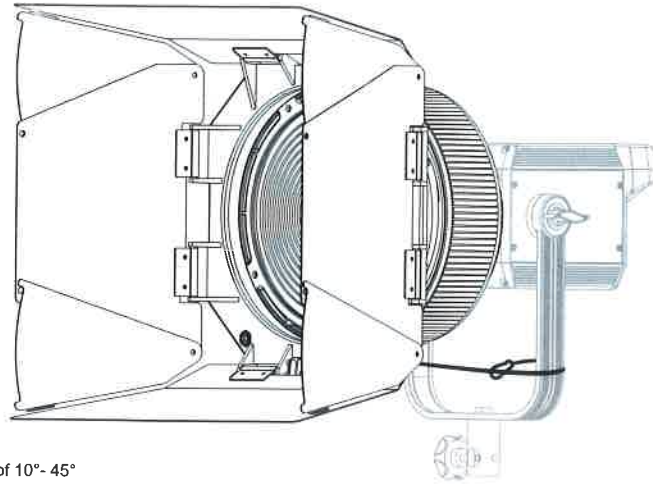


Spot-to-flood Range of 10°- 45°


FL-20 Fresnel Lens, compatible with LED lights at 300W or less.

FL-20G Fresnel Lens, compatible with LED lights at 500W or less.


## Usage

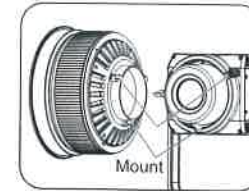


When installing the Fresnel lens, make sure its mount points line up the slots on the light fixture. When the mount points and slot are lined up push the Fresnel lens in place rotate the lens in the locking direction as described on the light.

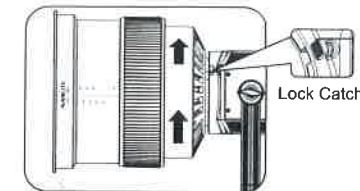


When removing the Fresnel lens, push and hold on the lock catch while rotating the lens and you are able to remove it from fixture.

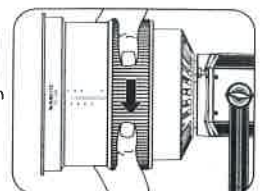


When adjusting the spot light, to adjust the beam angle of light, turn the dial on the lens with two fingers, like adjusting zoom on a camera lens to get the focusing effect. (As described on the light.)

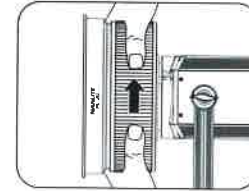

When adjusting the flood light, to adjust the beam angle of light, turn the dial on the lens with two fingers, like adjusting zoom on a camera lens to get the flooding effect. (As described on the light.)

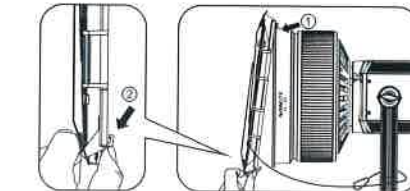

When installing the barn door, make sure the mount points ① of barn door connect properly in place onto this rim of the fresnel, pinch the mount points ② of barn door with hand and clamp it onto the Fresnel Lens, then connect the safety strap to the light stand. (As described on the light.)

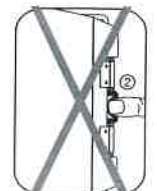

When installing the barn door, please do not press the mount points ② of barn door.

The instruction was written according to the strict production test of our company, if there are any changes related to the design of the product later, we will not keep you updated for that.